 


Product Instructions

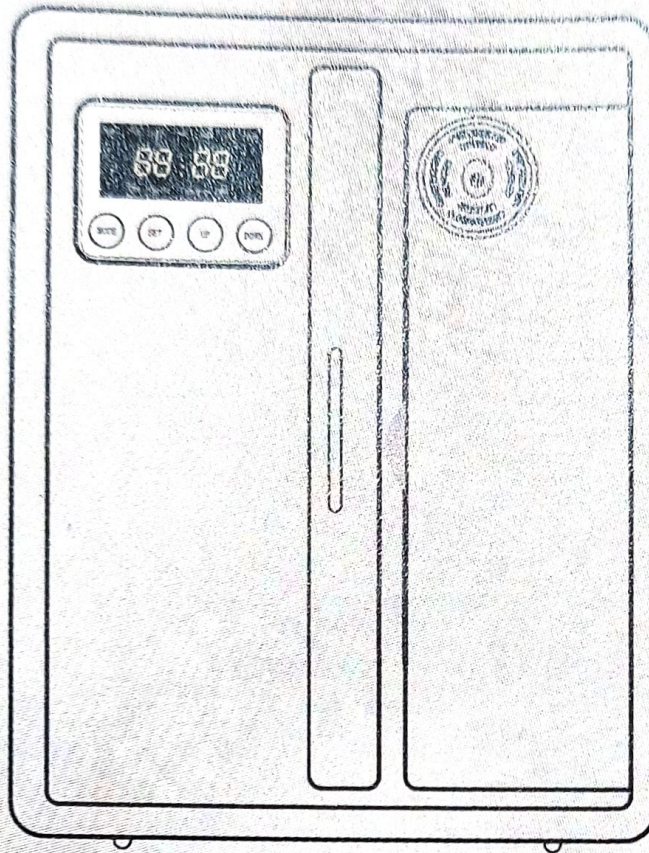

Bluetooth Setting Steps

- 1: Connect the machine to power supply
- 2: Enable your mobile phone Bluetooth before machine setting
- 3: Scan the following code, download the Bluetooth APP, or search AF Aroma in the APP store




Apple




Android

- 4: Enter the APP, click "Search equipment" and the searched aroma diffuser (as shown in Figures 1 and 2), and enter the machine setting with the default password: 9999 (as shown in Figure 3).

 
(Figure1)

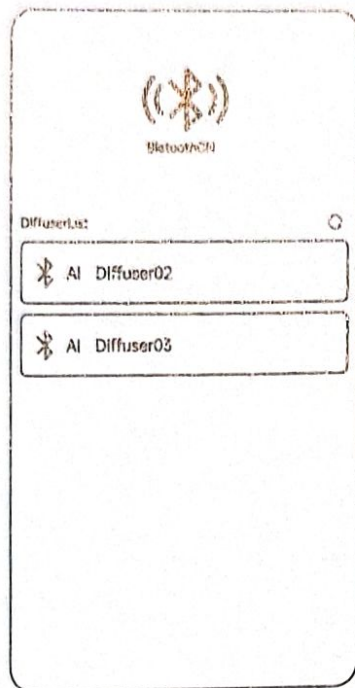


(Figure2)

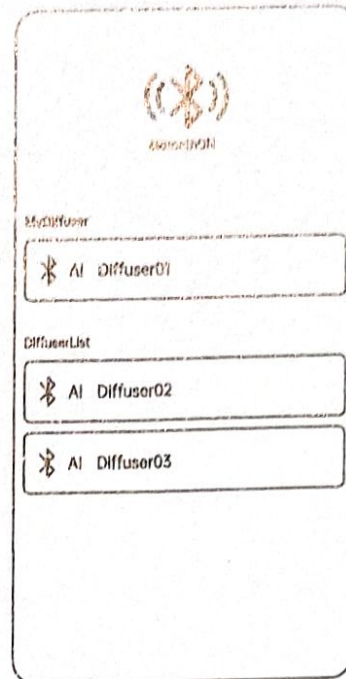 


5: Enter the operation mode setting (Figure 4). Time, operation and week setting can be found (Figure 5). Click the date option behind week, and start aroma diffusion setting (Figure 6). Time refers to the time period for aroma diffusion within one day (Figure 6) operation refers to the aroma diffusion interval set (second) (Figure 6) and week refers to the date requiring aroma diffusion every week (Figure 6).

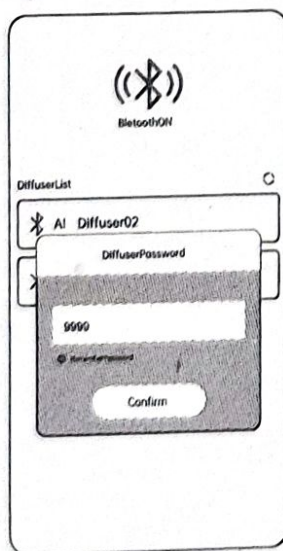 


(Figure3)

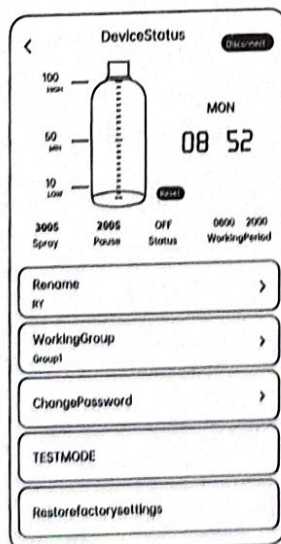 

(Figure4)

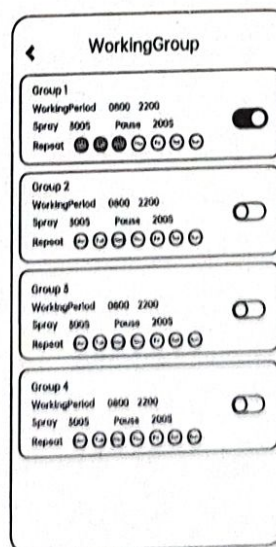 

(Figure5)

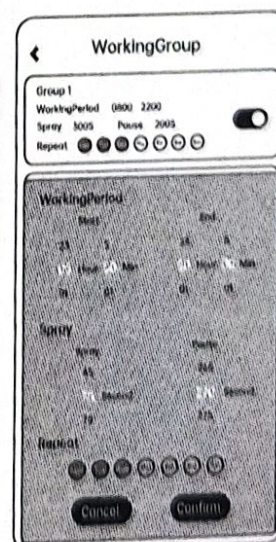 

(Figure6)

6: The setting method for modes 2, 3 and 4 of the remaining time periods is similar to the above.

: Setting precautions

When the operation exceeds one day, two time periods should be set. For example, if it is to set the time period of 1:00-02:00, (it is needed to set the first time period: 00:01-02:00 first and then the second time period: 1:00-23:59). It is not allowed to set 00:00, or the machine will not operate. The time periods set should not be overlapped, or the machine will not operate, neither.

Product Instructions

Product Introduction

This product is a timed automatic aroma spray machine.

Operation Guide



Operation Steps

1. Connect the equipment to an electricity supply

Plug the adapter into the diffuser, and then plug the adapter into an outlet.

2. Set the working time frame

This equipment allows setting up four operating time frames and provides different options for selecting the cycle of working days.

[MODE]: This button is for selecting the working day, setting the working time frame, and controlling the on-off cycle. Details are shown below. (Note: As for the set time, the setting is valid only when the end time is later than the start time.)

[SET]: This button is for entering the setting state, such as time setting and working day setting.

[UP]: This button is for moving forward the time and the working day, and increasing the length of time.

[DOWN]: This button is for moving back the time and the working day, and decreasing the length of time. (Note: Hold this button down for 5 seconds to carry out a factory reset.)

Note: The operating time frames should not overlap.

3 Set the system time:

Adjust the equipment time to make it consistent with the local time. The equipment applies the 24-hour clock system.

1st press of the [SET] button: the figure of the hour flashes. Press [UP] and [DOWN] buttons to adjust the hour.

2nd press of the [SET] button: to finish setting the hour of the time, and the figure of the minute flashes. Press [UP] and [DOWN] buttons to adjust the minute.

3rd press of the [SET] button: to finish setting the minute of the time, and the current working day flashes. Press [UP] and [DOWN] buttons to adjust the working day.

4th press of the [SET] button: to finish setting up the system time.

4. Set the operating time frame:

Hold the [MODE] button down for 3 seconds, the indicators of "Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday" on the screen flash. Then press [UP] and [DOWN] buttons to switch the cycle of working days.

After the figure "1" appears on the screen, start setting up the first operating time frame. Press [SET] button, the screen displays "00:00", the time indicator of the hour ("00") flashes, and the indicator of "Timing ON" is lit. Press [UP] and [DOWN] buttons to adjust the hour of the Start Time. Press [SET] button to finish setting up the Hour. Then the time indicator of the minute ("00") flashes. Press [UP] and [DOWN] buttons to adjust the minute of the Start Time. Press [SET] button to finish setting up the Minute.

Then set up the End Time. The screen displays "00:00", the time indicator of the hour ("00") flashes, and the indicator of "Timing OFF" is lit. Press [UP] and [DOWN] buttons to adjust the hour of the End Time. Press [SET] button to finish setting up the Hour. Then the time indicator of the minute ("00") flashes. Press [UP] and [DOWN] buttons to adjust the minute of the End Time. After finishing setting by press [SET] and the [Cycle ON] appears on the LED screen. Then start setting up the duration of spraying ranging from 5 seconds to 200 seconds. Pressing [UP] or [DOWN] buttons can adjust 5 seconds each time. After finish setting up the duration of spraying, press [SET] and the [Cycle OFF] appears on the LED screen. Then start setting up the duration of interval ranging from 5 seconds to 900 seconds. Pressing [UP] or [DOWN] buttons can adjust 5 seconds each time.

Then enter the setting of the second operating time frame. The instructions are identical to those on setting up the first operating time frame. The instructions on the third and the fourth operating time frame setting are also the same. If you do not need to set up the second, third, or fourth operating time frame, press [MODE] button to skip the setting process.

Note 1: if you didn't set up the fragrance concentration on the 2nd

stage and 4th stage, it will work with the first stage fragrance concentration

Note 2: The setting is valid only when the end time is later than the start time.

5. Set the fragrance concentration in the space

After finishing setting each operating time frame, press [SET] repeatedly until [Cycle ON] appears on the LED screen. Then start setting up the duration of spraying ranging from 5 seconds to 200 seconds. Pressing [UP] or [DOWN] buttons can adjust 5 seconds each time.

After finish setting up the duration of spraying, press [SET] repeatedly until [Cycle OFF] appears on the LED screen. Then start setting up the duration of interval ranging from 5 seconds to 900 seconds. Pressing [UP] or [DOWN] buttons can adjust 5 seconds each time.

6. Caution

When the operation exceeds one day, two time periods should be set. For example, if it is to set the time period of 1:00-02:00, (it is needed to set the first time period: 00:01-02:00 first and then the second time period: 1:00-23:59). It is not allowed to set 00:00, or the machine will not operate. The time periods set should not be overlapped, or the machine will not operate, neither.

7. Maintenance and After sales Service

I. After sales service

1. Free technical troubleshooting and installation.
2. Free fragrance effect tracking scheme online.

II. Product warranty and precautions

1. The product warranty is 12 months (calculated from the date of sales).
2. Intentional damage or misuse is not covered by the warranty.
3. Use alcohol to wash the atomizing core after the service of 3-6 months.

8. Packing list

name	quantity
Fragrance equipment	1 set
Power cord	1 piece
User's Manual	1 manual
Hanging board of the machine	1 item