

IMPORTANT! KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE!

INSTRUCTION MANUAL FOR USE OF KID'S TOY RIDE ON / SCOOTER 3 IN 1 „MULTI PLUS”

MULTI PLUS



This product **chipolino** is produced in conformity with the requirements of the Toy Safety Directive 2009/48/EC of the European Parliament and the Council, national legislation and the applicable to the product European Standards.

TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL:


IMPORTANT! WARNINGS!

- ❖ **WARNING!** USE ONLY UNDER DIRECT ADULT SUPERVISION – DANGER OF FALLING!
- ❖ **WARNING!** THE TOY IS SUITABLE FOR CHILDREN ABOVE 3 YEARS AND WEIGHT OF UP TO 25 KG WHEN USING THE TOY AS RIDE ON AND UP TO 50 KG WHEN USING THE TOY AS SCOOTER!
- ❖ **WARNING!** DO NOT OVERLOAD! THE TOY IS NOT SUITABLE FOR CHILDREN WITH WEIGHT ABOVE 25 kg WHEN USING IT AS RIDE ON AND ABOVE 50 KG WHEN USING IT AS SCOOTER!
- ❖ **WARNING!** BEFORE USING THE TOY, TEACH THE CHILD THE CORRECT WAY TO USE IT AND THE SAFETY RULES. Using the toy requires special skills and increased WARNING to avoid falling and collisions.
- ❖ **WARNING!** WEAR PROTECTIVE EQUIPMENT – helmet, knee and elbow protectors, appropriate shoes.
- ❖ **WARNING!** BEFORE EACH USE, CHECK IF THE HANDLEBAR IS WELL FIXED TO THE DECK AS WELL AS IF ALL SCREWS, NUT AND BOLTS ARE WELL TIGHTENED.
- ❖ **WARNING!** TO AVOID THE DANGER OF INJURY, REMOVE THE PUSH HANDLE WHEN THE CHILD CAN RIDE THE TOY ON HIS OWN.
- ❖ **WARNING!** USE THE TOY ONLY DURING THE DAY ON SECURED PLAYGROUNDS AT A SAFE DISTANCE FROM STREETS AND VEHICLE ROADS.
- ❖ **WARNING!** KEEP AWAY FROM FIRE!
- ❖ **WARNING!** USE THE TOY ONLY FOR ITS PURPOSE.
- ❖ **WARNING!** THIS TOY IS NOT INTENDED FOR AGGRESSIVE RIDE, TRICKS AND JUMPS!
- ❖ **ONLY** an adult should assemble and disassemble the TOY!
- ❖ Running or skating while pushing the child in the toy is forbidden!
- ❖ **DO NOT** allow presence of children under 3 years before having assembled the TOY completely, to avoid access to small and dismantled parts!
- ❖ This TOY is intended for one child **ONLY**!
- ❖ **DO NOT** use the TOY if you find missing or damaged parts.
- ❖ **DO NOT** use the brake while turning left or right, this can cause the child to fall!
- ❖ **DO NOT** attach strings or accessories to the TOY to avoid risk of entanglement!
- ❖ **DO NOT** put items or luggage on the handlebar to avoid risk of balance disturbance!
- ❖ The child must hold the handlebar with both hands to ride safely.
- ❖ **DO NOT** put heavy items or objects on the TOY in order not to damage its construction.
- ❖ **DO NOT** use another transport means to move the TOY by hauling!
- ❖ **DO NOT** let the child using the TOY or other children close to it to touch the wheels with hands and/or put items on them!
- ❖ Use away from rivers, pools, stairs and hurdles!
- ❖ **DO NOT** make changes or modifications to the construction of the TOY! If necessary, contact the dealer or an authorized service for advice and repair.
- ❖ **DO NOT** use spare parts or other components, which are not supplied by the producer! The producer revokes all responsibility in case you have used spare parts different from the original ones or recommended by him.
- ❖ Keep the plastic bags away from children to avoid risk of suffocation!

MAIN FEATURES

- ❖ The TOY is suitable for children above 3 years and weight:
 - Up to 25 kg when using the toy as ride on (with the seat)
 - Up to 50 kg when using the toy as scooter.
- ❖ The toy may be driven by the child or pushed by the parent using the push handle. It may be used as scooter or as ride on car;
SCOOTER: The child grips the handlebar with two hands, steps on the deck with one foot and pushes with the other foot;
RIDE ON CAR: The child sits on the seat, grabs the handlebar and moves by pushing his feet on the ground;
RIDE ON WITH HANDLE: The child sits on the seat, grips the handlebar and adult pushes the toy by the handle.
- ❖ Rubber anti-slip handle grips;
- ❖ Rear wheel brake.

MAIN PARTS

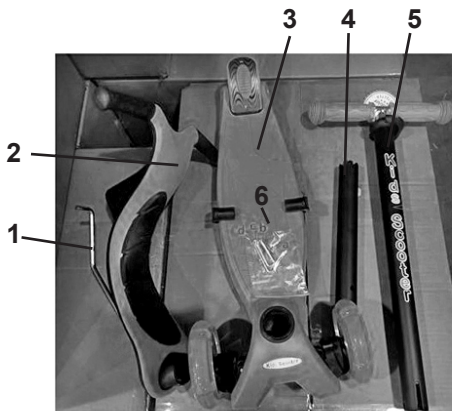

- 1 – Seat supports; 2 – Seat; 3 – Scooter deck;
4 – T-bar tube; 5 – Push handle/ T-bar

Please, check if all described parts are available.


WARNING! FOLLOW EXACTLY THE GUIDELINES AND SEQUENCE OF ASSEMBLY AND USE GIVEN IN THE BELOW TEXT AND FIGURES.

WARNING! CHECK THE SECURITY OF FIXING UPON COMPLETING EACH OPERATION!

WARNING! THE TOY MUST BE USED WITH INCREASED WARNING BECAUSE IT REQUIRES SKILLS TO BALANCE. IN THIS WAY YOU WILL AVOID FALLING OR COLLISIONS WHICH MAY CAUSE INJURY TO THE CHILD OR OTHER PEOPLE.

Necessary: allen wrench (included).

ASSEMBLY OF SCOOTER TOY

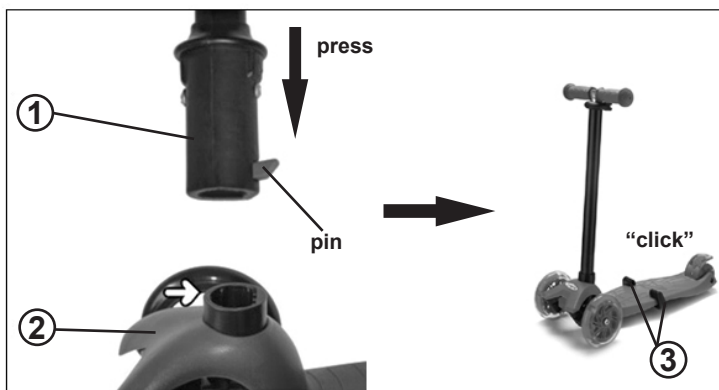

ATTENTION! When using the toy as scooter, the push handle is used as a T-bar.

ATTENTION! When using the toy as scooter, remove the two plastic elements from the deck by unscrewing the bolts.


Insert the handle (T-bar) with pressure in the opening until you hear a click.

- ① Push handle/T-bar
- ② Scooter deck
- ③ Plastic elements for the seat supports

To remove the handle/T-bar, push the button and take it out.

ASSEMBLY OF RIDE ON

1 – ASSEMBLY OF HANDLE TUBE

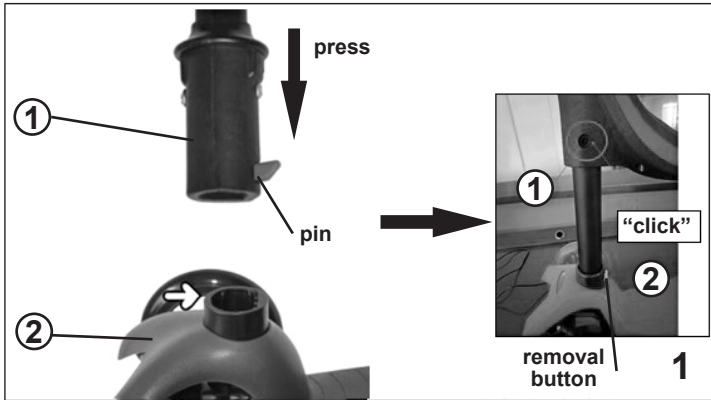


Insert the handle tube in the corresponding opening with pressure until you hear a click.

- ① Handle tube
- ② Scooter deck

To remove it, press the button and take it out.

2 – ASSEMBLY OF SEAT

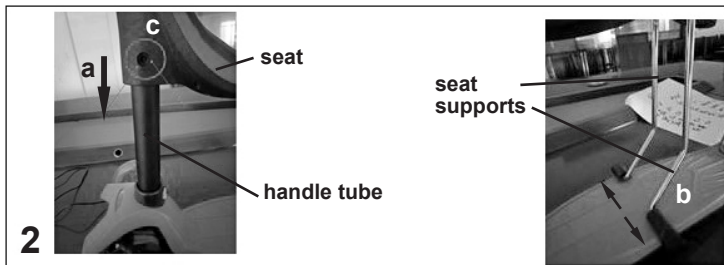

- 2a – Place the seat on the handle tube and make sure the openings of seat and tube match.
- 2b – Install the seat supports on the corresponding openings on the deck as shown in picture.
- 2c – Fix the seat to the handlebar with a screw using the allen wrench.

ATTENTION! After the seat is fixed the child may use the toy as a ride on.

3 – INSTALLING THE PUSH HANDLE




Insert the handle in the seat opening with pressure until you hear a click.
Press the button and remove the handle.

Note: The assembly and removal of the handle is the same as in **point 1 „ASSEMBLY OF HANDLE TUBE“**

After the handle is fixed, an adult can push the toy and child places his feet on the deck.


ADJUSTING THE HANDLEBAR/PUSH HANDLE HEIGHT

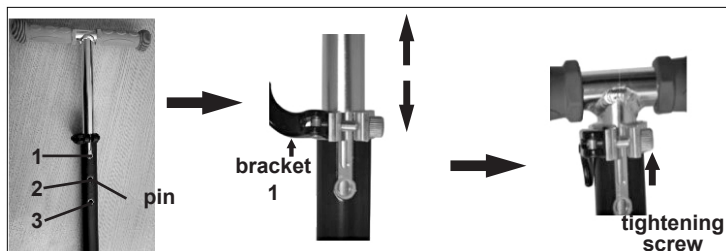

The push handle/ handlebar may be adjusted in 3 positions (1, 2, 3).

- Pull out the bracket.
- Press the pin and move the handlebar up or down to the desired height. When the pin shows through the opening you will hear a click.
- If necessary tighten the bracket.
- Move the bracket inwards.

SCOOTER MOVEMENT AND USING THE BRAKE

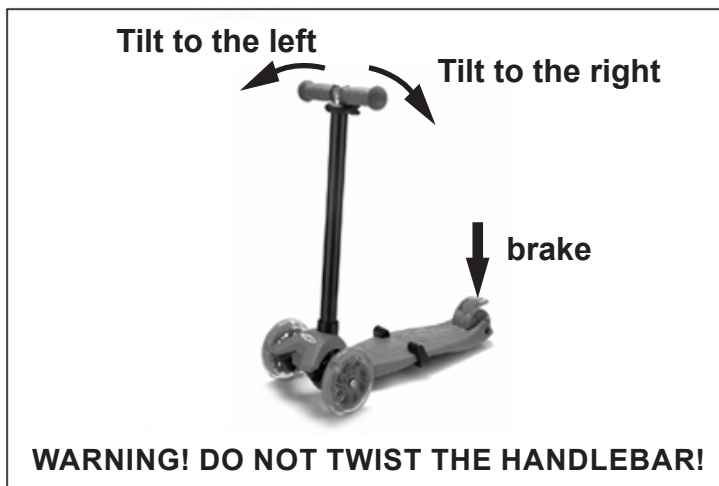

When you tilt the handlebar to the right, the wheels will turn RIGHT and the scooter will turn right.
When you tilt the handlebar to the left, wheels will turn LEFT and the scooter will turn left.
When in upright position, the scooter will move STRAIGHT.


The rear wheel has a BRAKE. To use the brake during movement, the child can step with its heel on it and press it until the scooter stops.

WARNING! You must step on the brake with one foot only!

Use of helmet, knee and elbow protectors, shoes

For more safety, the child must wear a helmet on the head, knee and elbow protectors and shoes while using the toy!

The helmet must be steady on the head and not tilted back or not protecting the forehead.

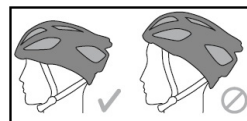

CARE AND MAINTENANCE

- ❖ Periodically check the good working order of the separate parts.
- ❖ Do not cover the TOY with liquid. Clean with soft damp towel and a neutral liquid soap.
- ❖ Do not clean with aggressive detergents containing abrasive particles, ammonia, bleach or spirit.
- ❖ Regularly oil the moving parts.
- ❖ Do not use on sandy terrains.
- ❖ Do not store the TOY in places with very warm air or close to heat sources, it will deform.
- ❖ Store the TOY in a clean and dry space. Do not subject to direct environmental influence – sun, rain, moisture or harsh temperature changes!
- ❖ Always dry the TOY or leave it to dry before storing it or using it again. Mildew may appear if you store the product damp.
- ❖ In case of problems related to the normal exploitation of the product, turn to authorized service for advice and repair.

Materials used: plastic, metal.

DSMUL023xxx/WX-807



BULGARIA, Plovdiv, 1 Goliamokonarsko Shosse Str.

www.chipolino.com