





Lucy Sing&Dance



Made in China

Batteries

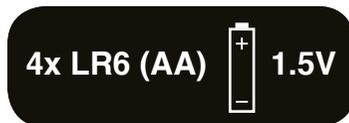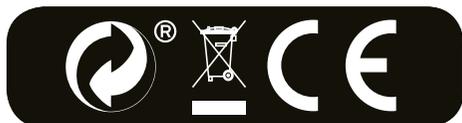

IMC TOYS, S.A. • Pare Llaurador, 172 • 08224 Terrassa (Barcelona) SPAIN
Tel. 0034 937 888 992 • Fax 0034 937 332 833 • www.imctoys.com

After Sales Service • Servicio Posventa
e-mail: sat@imc.es

ITEM 95854IM3 • EAN: 8421134095854 • 220118 • K24



Lucy Sing&Dance

95854_V17_EN


INSTRUCTIONS FOR USE

LUCY



DESIGN PROTECTED PRODUCT PATENTED ©IMC TOYS

FUNCTIONS OF LUCY

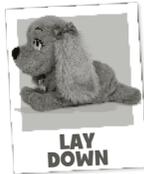

LAY DOWN

Voice command: "LAY DOWN"
Description: She stretches out on the floor.



SHAKE HANDS

Voice command: "SHAKE HANDS"
Description: She stands on her hind legs and moves her forelegs.



SEARCH

Voice command: "SEARCH"
Description: She sniffs the ground.



BURY

Voice command: "BURY"
Description: She buries using her hind legs and forelegs.



SIT

Voice command: "SIT"
Description: She sits.



STAND UP

Voice command: "STAND UP"
Description: She stands on her hind legs.



BARK

Voice command: "BARK"
Description: She barks several times and stays still.



EAT

Voice command: "EAT"
Description: She bends down and makes eating sounds.



GET UP

Voice command: "GET UP"
Description: If she was on the floor, she gets up. If she was standing up, she will bark once.



GIVE ME A KISS

Voice command: "GIVE ME A KISS"
Description: She gets up and jumps forwards to kiss you.



ON YOUR HEAD

Voice command: "ON YOUR HEAD"
Description: She does a handstand.



LET'S WALK

Voice command: "LET'S WALK"
Description: She takes some steps forward.



STRETCH

Voice command: "STRETCH"
Description: Lucy lies down on the floor and stretches, moving her paws forwards and backwards three times, then gets up.



DANCE

Voice command: "DANCE"
Description: Lucy sings a song and stands up, moving her front paws for you to dance with her.



SING

Voice command: "SING"
Description: She sits and starts barking a song. She has two songs to sing.



BALLET

Voice command: "BALLET"
Description: Ballet music plays and Lucy starts to make movements to the rhythm of the music.



HIP HOP

Voice command: "HIP HOP"
Description: Hip-Hop music plays and Lucy starts to make movements to the rhythm of the music.



SALSA

Voice command: "SALSA"
Description: Salsa music plays and Lucy starts to make movements to the rhythm of the music.



ROCK & ROLL

Voice command: "ROCK & ROLL"
Description: Rock & Roll music plays and Lucy starts to make movements to the rhythm of the music.



GREET THE AUDIENCE

Voice command: "GREET THE AUDIENCE"
Description: Lucy stands on her hind legs and moves her front legs a few times and crouches down, bowing to the audience.

INSTRUCTIONS FOR USE

PRODUCT FEATURES

Lucy, the most obedient puppy, responds to up to 20 different voice commands. She barks, sniffs, give kisses and can even sing and dance a range of styles! It has an interactive mode through an APP; with which you can make Lucy dance new styles or create your own dance for her. **The App is free** and is available in iOS and Android versions from the usual App suppliers (Apple Store and Google Play).

USE AND OPERATING INSTRUCTIONS

IMC TOYS products undergo strict production controls to guarantee the enjoyment and safety of your children. They are easy to use and operate. We are certain that they will provide your children with great entertainment. Thank you for purchasing one of our products. To consult our extensive product catalogue, please visit our web page at www.imctoys.com.

OPERATION WITH BATTERIES

IMPORTANT INFORMATION NOTE FOR ADULTS

Before giving the product to children, first remove all plastic, wires and any other object designed to fasten it during transport. This product comes factory-prepared for the "TRY ME" function. The batteries that it includes are designed for this use. Therefore, it is possible that they may be spent. If this is the case, we recommend they should be replaced.

The product is distributed in its original packaging and for demonstration purposes in stores with the selector switch in the TRY-ME position (see fig. 1). The product has limited functionality in this position and will not respond to any voice commands. Turn the switch to the ON position for normal operation.

Replacement and installation

This product requires 4 LR6 (AA) 1.5V alkaline batteries (included). Firstly, open the velcro closure and set the switch (A) to the OFF position (see fig. 1). Remove the safety screw from the lid of the battery compartment located at the bottom of the base (see fig. 2). Remove the dead batteries. Notice the correct placement of the batteries in the image (see fig. 2) and place them according to the position and polarity indicated. Replace the lid and the safety screw (for your children's safety) and finally close the velcro closure.

Warning! Replacing or handling the battery should always be done under the supervision of an adult.

Normal Mode, voice orders or commands:

With selector (A) in the ON position, first tell her LUCY so she will listen to you. If she has understood you, she will bark once. You must wait for her to stop barking before saying one of the voice orders to her. If she does not recognise your voice order, repeat her name, wait for her to bark and say the order to her again. Remember that Lucy cannot hear you while she is making sounds or moving. So that she can understand you better, there should not be too much noise around you when you give the voice orders (see section on Lucy's orders or functions). If you press the button on her back (B), with a stroking movement, Lucy will bark pitifully.

APP Interaction Mode

For Lucy to interact with the App, once it has been downloaded, you have to press button (C) in Lucy's ear for a few seconds, until Lucy barks twice. When she has barked twice Lucy will interact with the application. While Lucy is connected to the App she will not be able to hear you and perform functions with voice commands. The installed App offers a tutorial on how to use it. Follow the instructions to interact with Lucy. To stop the App-Lucy synchronisation function so that Lucy can hear you again (in other words, to return to normal mode), you have to press the button in her ear (C) for a few seconds until Lucy barks, just once in this case. Once this is done you can play normally.

Energy saving mode

If you do not play with Lucy for a few seconds if she does not receive any command or order she will lie down, whine and finally fall asleep. All the buttons work to wake Lucy up if she has fallen asleep. After playing with her, we recommend that you turn the switch to the OFF position so that she is completely turned off.

Tips for proper use

Troubleshooting

Lucy not responding, a decrease in the volume of the sound, and erratic movement are symptoms of dead batteries; they must be replaced.

MAINTENANCE

Cleaning: Only wash the surface of the product by hand. Remember that there are mechanisms and electronic circuits inside it which could be damaged when in contact with water. Use a cloth slightly dampened with water or dry foam, if necessary, and then dry immediately with a dry cloth or leave it to dry indoors, without exposing to sunlight or direct heat sources. Do not use detergents or solvents.

Do not use it until it is completely dry. If the equipment becomes wet, turn it off and remove the batteries immediately. Dry the battery compartment with a dry cloth. Leave the battery compartment open until it is completely dry. If you wish, use a hairdryer to speed this process up. Do not try to use the unit until it is completely dry.

RECOMMENDATIONS FOR RESPONSIBLE USE AND FOR PROTECTING THE ENVIRONMENT

Put all the transport packaging, cardboard, plastic, etc. in the recycling containers in your neighbourhood.

Use rechargeable batteries whenever possible. Remember to turn off the toy if you have finished playing with it and take out the batteries if you are not going to be using it again for a long time.

If you no longer want the toy and it still works, do not throw it away. Remember that other people can still enjoy it, and find bodies or associations that can give it to them. At the end of the life span of this product, it must not be disposed of as normal household rubbish. It should be delivered to a collection point for recycling electrical and electronic devices. Consult the symbol on the product, in the user manual or on the packaging for more information.

The materials are recyclable in accordance with their markings. If you recycle materials

or find ways to reuse old devices, you make a considerable contribution to protecting the environment. Please consult the nearest recycling centre or local authorities.

WARNINGS!

- Warning. Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.
- Please keep the packaging for future reference as it contains very important information.
- Please note that due to technical improvements this product may differ from the one that appears in the illustration.
- This product requires 4 type LR6 (AA) 1.5V batteries (included).
- This product is distributed with 4, LR6 (AA) 1.5V batteries for the "TRY ME" function. For normal operation of the product, it may be necessary to replace the batteries.
- The batteries or accumulators must be inserted according to the polarity indicated in the illustration.
- Used batteries or accumulators must be removed from the toy; failure to do so could cause damage.
- Do not mix old batteries with new ones.
- Do not mix different types of batteries.
- Use only those batteries recommended by the manufacturer or equivalents.
- Non-rechargeable batteries must not be recharged.
- The battery terminals must not be bridged or shorted.
- Changing or handling the batteries must always be carried out under the supervision of an adult.
- Remove the batteries from the compartment if the unit is not going to be used for a long period of time.
- Please respect the environment and deposit used batteries in the containers provided.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- This product achieves better performance using alkaline batteries.
- Read the instructions before use, follow them and keep them for reference.
- Under the environment with radio frequency interference, the sample may malfunction and will be resumed to normal after removal of the interference.
- Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.
- Under the environment with Fast Transient, the sample may malfunction and require user to reset the sample.
- Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).

If you have a claim, please contact the authorised distributor.