


**IMPORTANT! READ CAREFULLY KEEP THIS USER'S MANUAL  
IN A SAFE PLACE FOR FUTURE REFERENCE!**

## **INSTRUCTION MANUAL FOR HIGH CHAIR AND BOOSTER SEAT "ROTTO"**

**ROTTO**

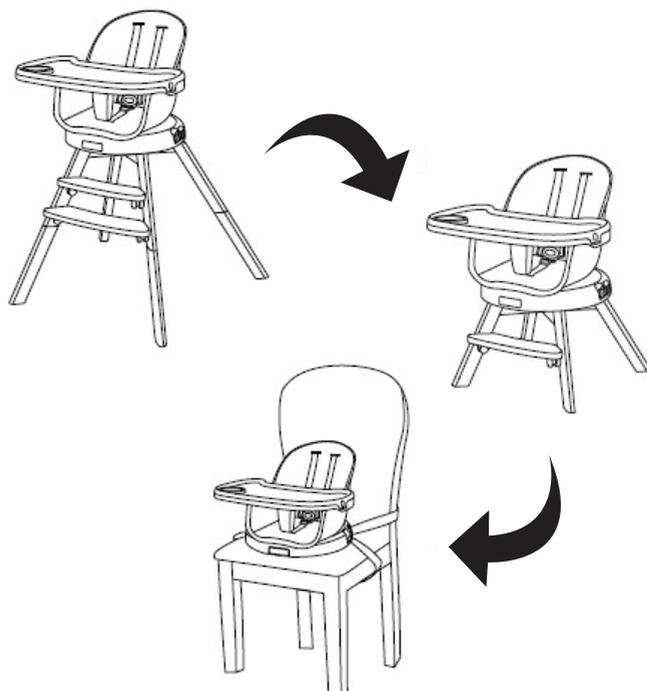

This high chair **chipolino** has been manufactured in accordance with the requirements of Directive 2001/95/EC of the European Parliament and of the Council and complies with EN 14988 Children's high chairs. Safety requirements, European Standard EN 16120:2012+A2:2016 Child use and care articles. Chair mounted seat and regulations of the national legislation, as well as the Consumer Protection Law.


**ATTENTION! YOUR CHILD WILL BE MOST SECURE IF YOU FOLLOW THE INSTRUCTIONS AND RECOMMENDATIONS GIVEN IN THIS USER'S MANUAL!**

- ❖ **CAUTION! NEVER LEAVE YOUR CHILD UNATTENDED!**
- ❖ **CAUTION! THIS PRODUCT IS SUITABLE FOR CHILDREN, WHO CAN SIT ALONE UNAIDED (MINIMUM AGED 6 MONTHS), AGED UP TO 3 YEARS AND WEIGHING NO MORE THAN 15 KG.**
- ❖ **CAUTION! ALWAYS USE THE SAFETY BELTS, WHEN THE CHILD IS IN THE CHAIR! ALWAYS CHECK IF THEY ARE SECURELY FIXED TO THE HIGH CHAIR/BOOSTER SEAT'S FRAME!**
- ❖ **CAUTION! DANGER OF FALLING: DO NOT LET THE CHILD CLIMB ON THE PRODUCT!**
- ❖ **CAUTION! ALWAYS USE THE RESTRAINT SYSTEM OF BOOSTER SEAT TO THE ADULT CHAIR AND ALWAYS CHECK IF THE HARNESSSES ARE PROPERLY FIXED AND CONNECTION IS RELIABLE AND STABLE!**
- ❖ **CAUTION! BEFORE USE ALWAYS CHECK SAFETY AND STABILITY OF BOOSTER CHAIR INSTALLED ON THE ADULT CHAIR!**
- ❖ **CAUTION! DO NOT INSTALL THE BOOSTER CHAIR ON ADULT CHAIR WITHOUT BACKREST OR ON BENCH!**
- ❖ **CAUTION! DO NOT USE THE HIGH CHAIR BEFORE HAVING MADE SURE THAT ALL PARTS ARE IN GOOD ORDER AND ARE SET IN THE CORRECT POSITION!**
- ❖ **CAUTION! KEEP THIS PRODUCT AWAY FROM FIRE! BE AWARE OF THE RISK OF OPEN FIRE AND OTHER SOURCE OF STRONG HEAT IN THE NEAR VICINITY OF THE HIGH CHAIR!**
- ❖ **CAUTION! OBSERVE THE RISK OF THE PRODUCT TILTING IF THE CHILD REACHES AND PUSHES WITH ITS FEET SOLD BASE SUCH AS A TABLE.**
- ❖ Assembly of the product and installation of booster seat on the adult chair must be done only by adult!
- ❖ To avoid injury, make sure your child is at safe distance during folding and unfolding of the product!
- ❖ This high chair is not suitable and must not be used by children, who cannot sit unaided and stay in this position by their own (minimum 6 months of age)!
- ❖ This high chair/booster seat must not be used for children weighing more than 15 kg!
- ❖ The high chair/booster seat has a single seat, intended for one child only.
- ❖ Do not lift the product by the food tray!
- ❖ Discontinue using the product if you find any missing or damaged parts!
- ❖ Do not let your child stand in the high chair/booster seat!
- ❖ Never lift, move, make any setting or repair to the chair, while there is a child in it!
- ❖ Do not place the high chair or adult chair with installed booster seat on it on elevated and/or uneven surfaces, while there is a child in it!
- ❖ Do not place the high chair or adult chair with installed booster seat on it near stairs, pools or other hazardous areas!
- ❖ Use the high chair only by its purpose.
- ❖ Do not use any spare parts or other components, which are not approved by the producer! The producer does not take any responsibility for the safety of the child when you have not used the proper and original spare parts, approved and provided by him!
- ❖ Do not apply any changes or modifications to the high chair's construction! Contact the dealer or an authorized repair service for advice and/or repair instead!
- ❖ Do not allow children younger than 3 years near the high chair during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- ❖ The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!

## MAIN FEATURES

- ❖ High chair is suitable for one child, who can sit alone unaided (minimum 6 months of age)
- ❖ High chair is suitable for one child aged up to 3 years and weighing not more than 15 kg.
- ❖ High chair and small chair
- ❖ Booster seat to be installed on adult chair
- ❖ 5-point safety harness system
- ❖ Adjustable leg rest – 2 positions (for high and for small chair)
- ❖ Tray can be adjusted forth and back (2 positions)
- ❖ Upper part of the tray is detachable
- ❖ Seat rotates at 360 degrees and can be fixed in 8 positions

## MAIN PARTS

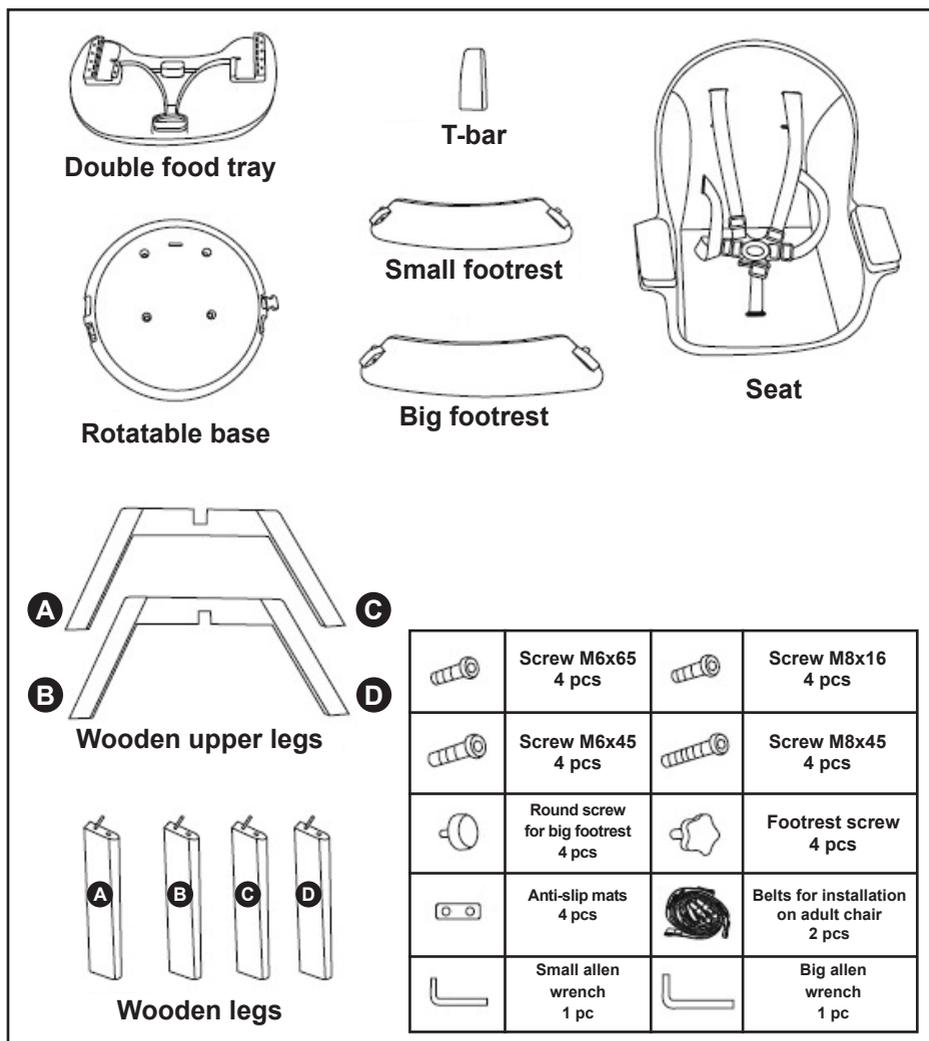

## ASSEMBLY INSTRUCTION AND FUNCTIONS

### 1 – ASSEMBLY OF WOODEN LEGS

Assemble wooden leg A with upper wooden leg A, B-B, C-C, D-D.

### 2 – INSTALLATION OF ASSEMBLED WOODEN LEGS

#### Note:

- Fixing of crossed wooden legs with screw must be done later (see fig. 5).
- On the assembled legs A and B there are openings for installation of footrests. Make sure these openings are located at front (2-3), otherwise figure 2 cannot be made.

### 3 – ASSEMBLY OF FOOTRESTS

### 4 – ASSEMBLY OF SEAT TO THE ROTATABLE BASE

**IMPORTANT!** After tightening the screws, the rotation button should be easy to press without any pressure.

### 5 – ASSEMBLY OF ROTATABLE BASE TO WOODEN LEGS

**IMPORTANT!** During tightening the screw in center (M6x45), chair must be turned with bottom showing upwards. Screw must be tightened well to secure the stability of high chair.

### 6 – ASSEMBLY OF PROTECTIVE T-BAR T THE TRAY

### 7 – ASSEMBLY OF FOOD TRAY (2 positions)

Pull both levers under the tray (7-1) and insert it (7-2) until you reach the required position. Release the levers to fix the tray.

Upper tray is removable for easy cleaning.

### 8 – PLACING THE ANTI-SLIP MATS

### 9 – RESTRAINT SYSTEM

Press the button in center of buckle and split the belts (9-1).

Move the buckles upwards or downwards to adjust the length of belts (9-2).

**ATTENTION!** Safety harnesses must not be worn out or torn and buckles must be strong, without any damages and provide secure connection.

**ATTENTION!** The harness must fit well the baby and must not be twisted. They must not change their length after they are locked!

## FUNCTIONS

### 10 – ADJUSTMENT FROM HIGH CHAIR TO SMALL CHAIR

Note: Store and keep in a safe place the screws and wooden legs for future usage.

To prevent sliding of chair and damages of floor surface, install the round head screws, as figure shows.









### 11 – ADJUSTMENT FROM HIGH CHAIR TO BOOSTER SEAT





Note: Store and keep in a safe place the wooden legs and accessories for them for future usage.







**IMPORTANT!** Install the booster seat on adult chair with appropriate sizes (see figure)!




### 12 – SEAT ROTATION AT 360 DEGREES (8 positions)

**IMPORTANT!** Before usage make sure seat is fixed in required position and it is non-moving.

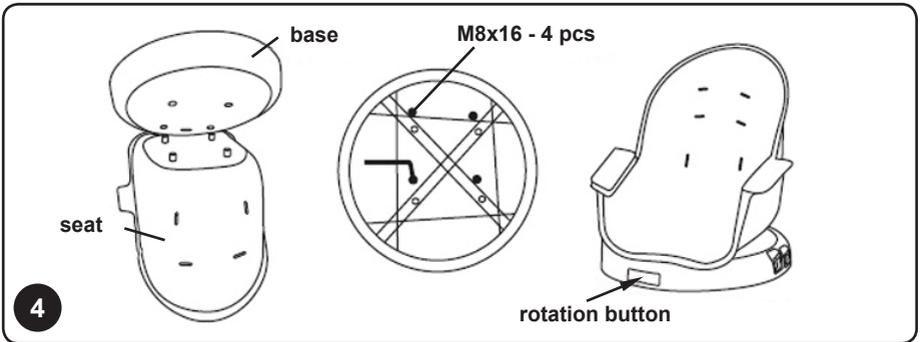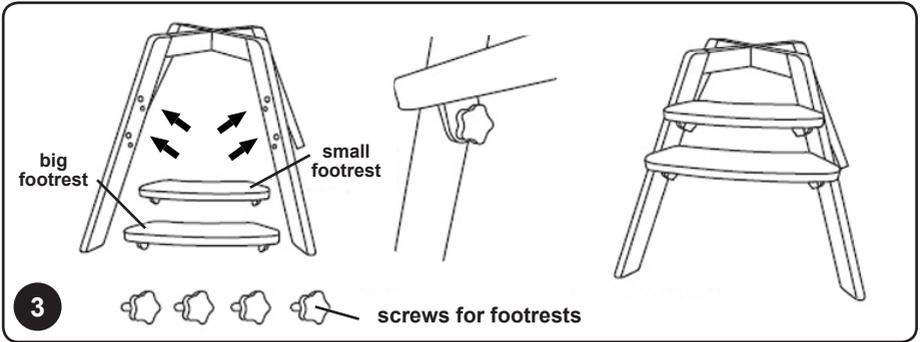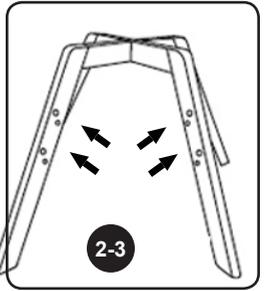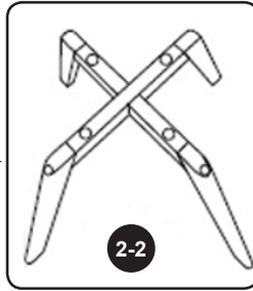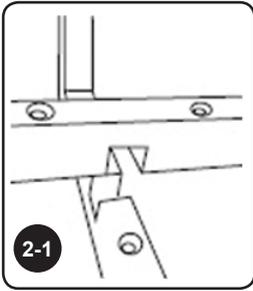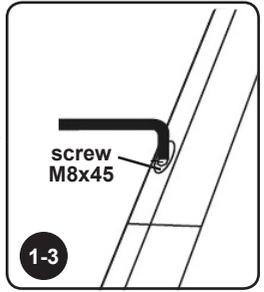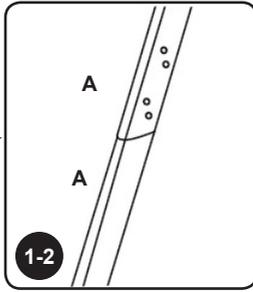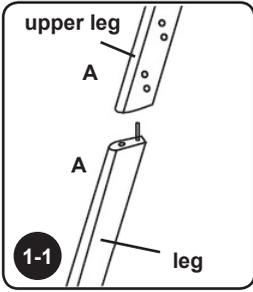

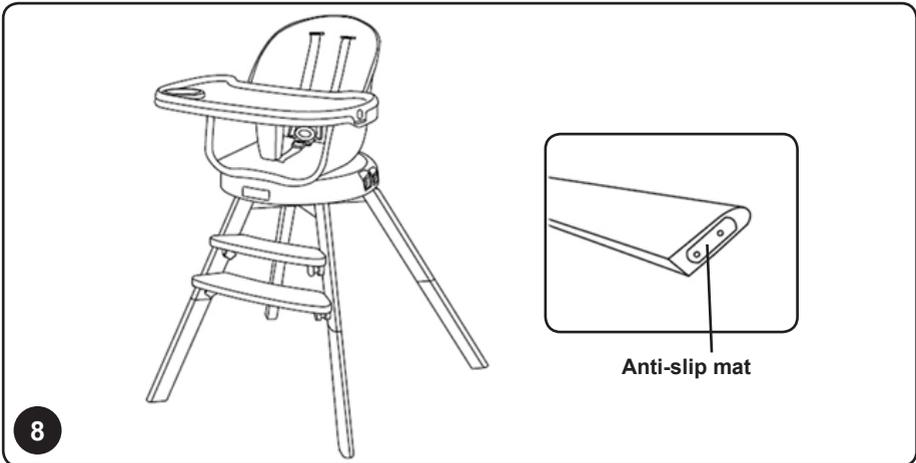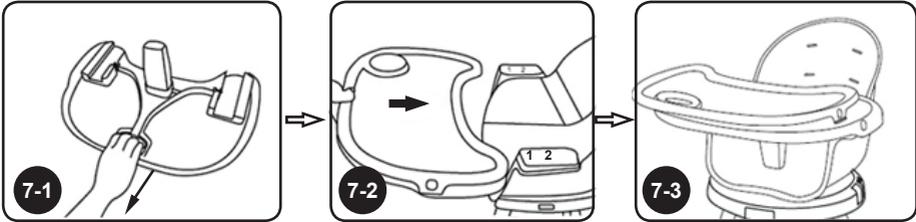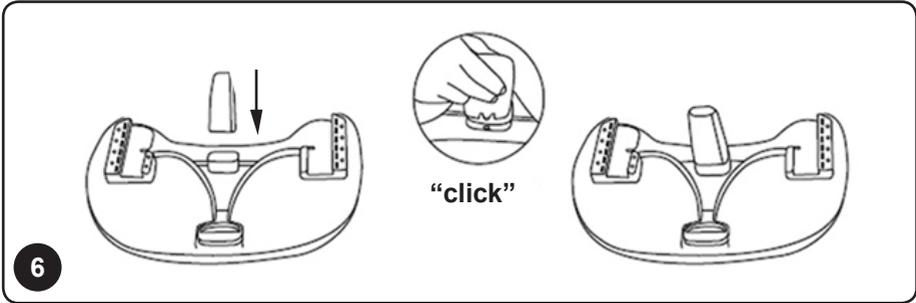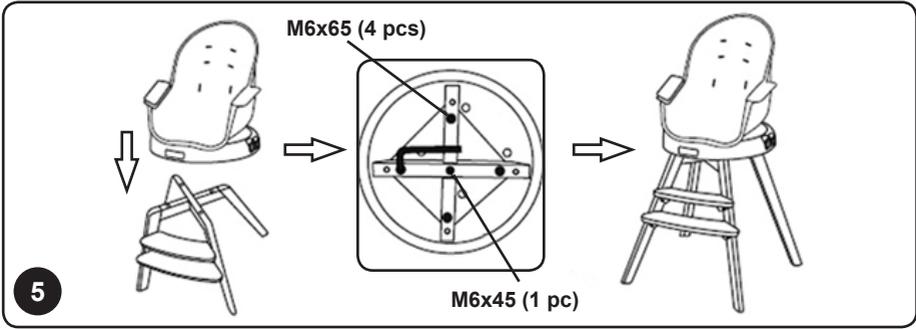

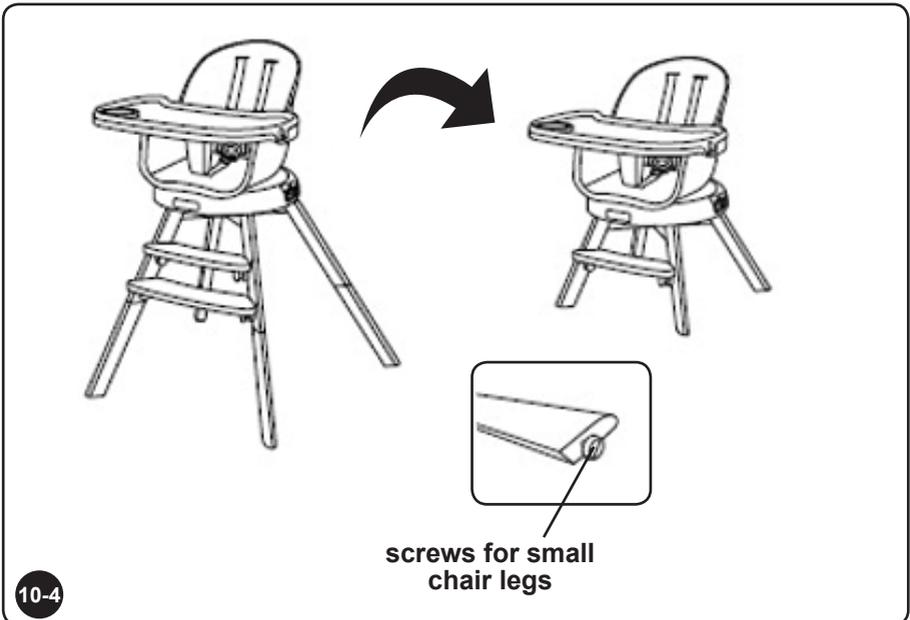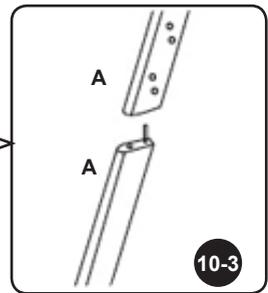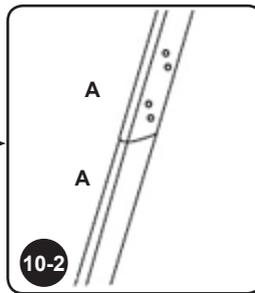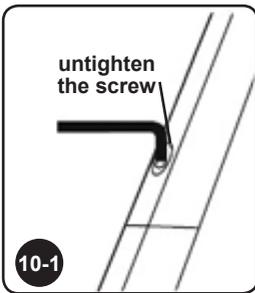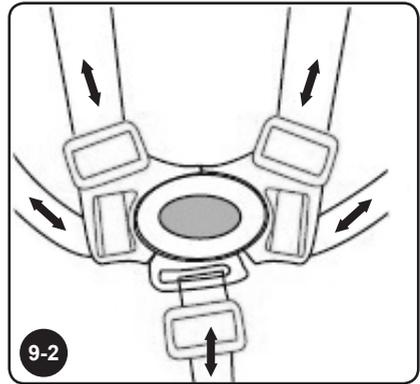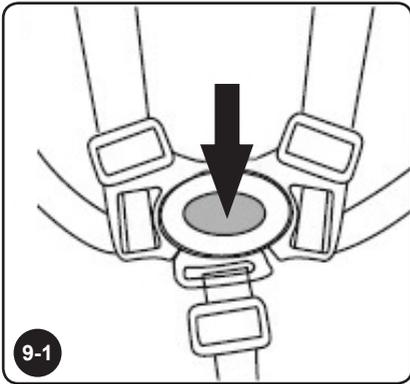

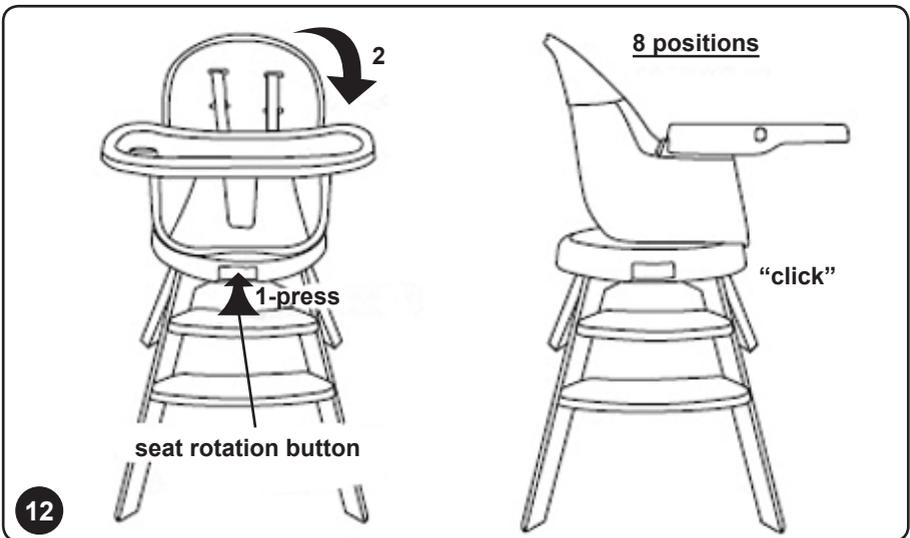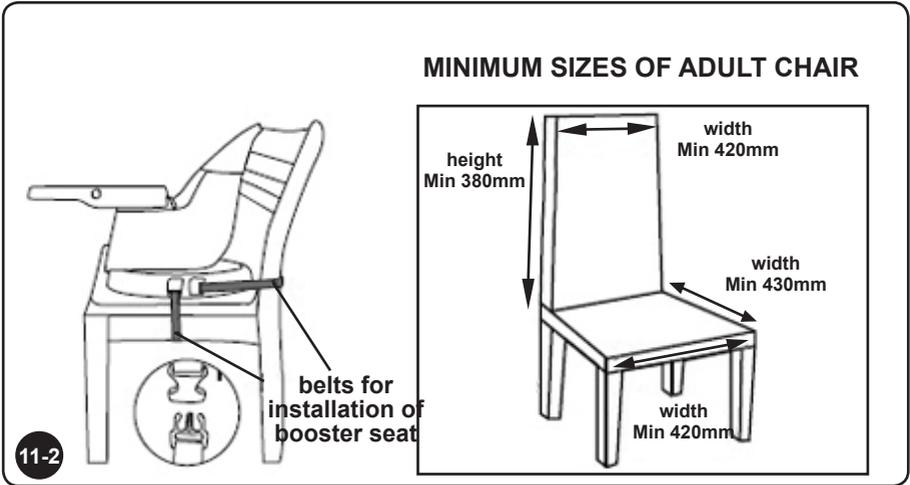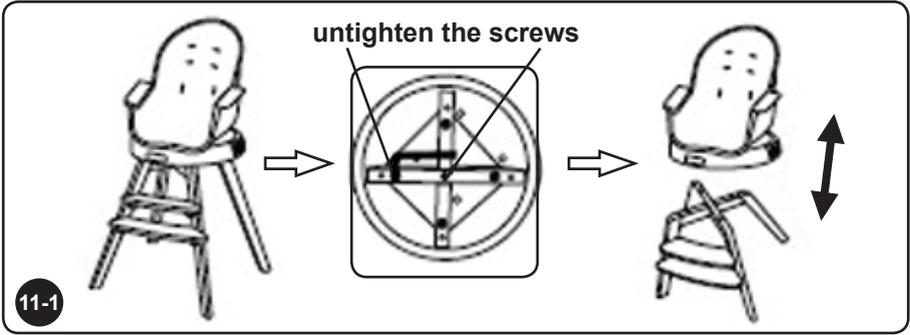

## CARE AND MAINTENANCE

- ❖ Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- ❖ Do not use abrasive, bleach or other aggressive detergents.
- ❖ Always after cleaning leave the high chair fully dry and after that use it or store it. It may appear mold to your high chair if you keep it moist.
- ❖ Do not put any objects and things in high chair or on the top of it to avoid damages of the structure.
- ❖ Always store your high chair indoors. Do not expose to direct environment influence - sun, rain, moisture and high temperature intervals.

### Fabric Composition:

**Outer:** polyester and leather

**Filling:** 100% polyester



STHRT020xxxx



---

1 Goliamokonarsko shosse, Plovdiv, BULGARIA  
[www.chipolino.com](http://www.chipolino.com)