3702T with PA toilet bowl



Packing list

Gravity-flush toilet ----------1
Seal for toilet base ----------1
Bolts for installation ----------2
Nut for installation ----------2
Protective jacket of bolts and nuts ----2
Manual ----------1
Flange ----------1
Elbow ----------1



INSTALLATION




Carefully set toilet over floor flange. Align holes in toilet base with T-bolts
Choose the proper flange.



Special flange for our toilet

Install waster valve

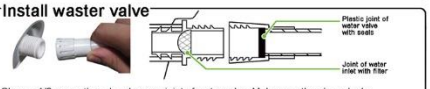

Choose 1/2 screw thread and proper joint of water valve. Make sure there's no leaks between connections.


!! Maximum pressure of water flow: 0.4Mpa

Use

Half- peda l flush and t hen full-flush



1. To add water to the toilet ,press the flush pedal part way down. Water flows into the bowl while flush ball remains closed.

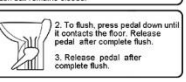


2. To flush, press pedal down until it contacts the floor. Release pedal after complete flush.


3. Release pedal after complete flush.

Buffer Seat and lid



Fix the seat and lid on the toilet bowl with 2pcs M6*20 hexagon socket screw

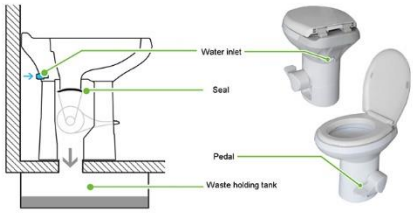

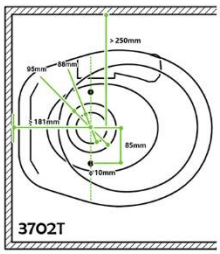

Warning

1. For cold weather, use non-toxic antifreeze. Never use automotive-type antifreeze.
2. Hot water more than 40 degrees is forbidden.
3. Pour antifreeze in flush water tank according to instructions from antifreeze manufacturer
4. Flush toilet several times until antifreeze has flowed completely through toilet.
5. Before storing the toilet ,turn off water supply to the toilet, remove water supply line from water valve and drain water from the toilet completely.



※ If the outlet has been processed, no sealant needed to the bottom of toilet. Install the toilet with flange directly.
※ If the flange and elbow needed, remove the black seal circle (as to picture 1) and then seal the bottom and joint of elbow (as to picture 2) to seal the toilet well.

