




Respirator - NP305 User's Instruction

Description NP305 is a respirator with single filter holder and twin exhalation valves.

Materials The respirator is composed of:
Half Facepiece: Thermoplastic Elastomer
Headband: Polyester
Filter Holder: ABS
Exhalation valves: Polypropylene

Filter Holder Respirator NP305 can be used with filters RC201, RC202, RC203, RC205, RC206, RC209. The filter holder made of a plastic container fitted with a blocking ring for the filters. Filters must be inserted into the holder as directed by the arrow marked on the label. The filters must be completely screwed onto the connector to ensure tightness.

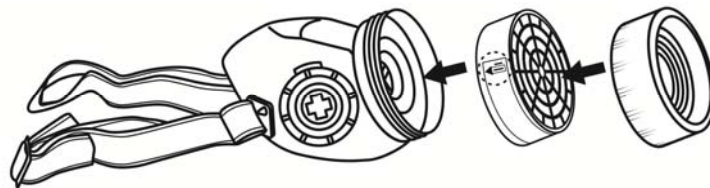

Directions for Use The respirator is intended for use only in atmospheres contaminated by low concentrations of pollutants. Do not use in areas where the oxygen concentration is lower than 17 % in volume.

Bearded people cannot safely wear any kind of breathing mask, the beard not allowing a perfect sealing on the face.

When odors, vapors or gases become noticeable or when breathing becomes excessive, the filters have served their useful life. Leave the contaminated area immediately and replace filters.

Storage Respirator can be stored for 5 years in their original packages. Please keep respirator in ventilated stores at room temperature. Extreme temperatures may alter its storage life. Avoid direct exposure to sunlight and heat sources.